
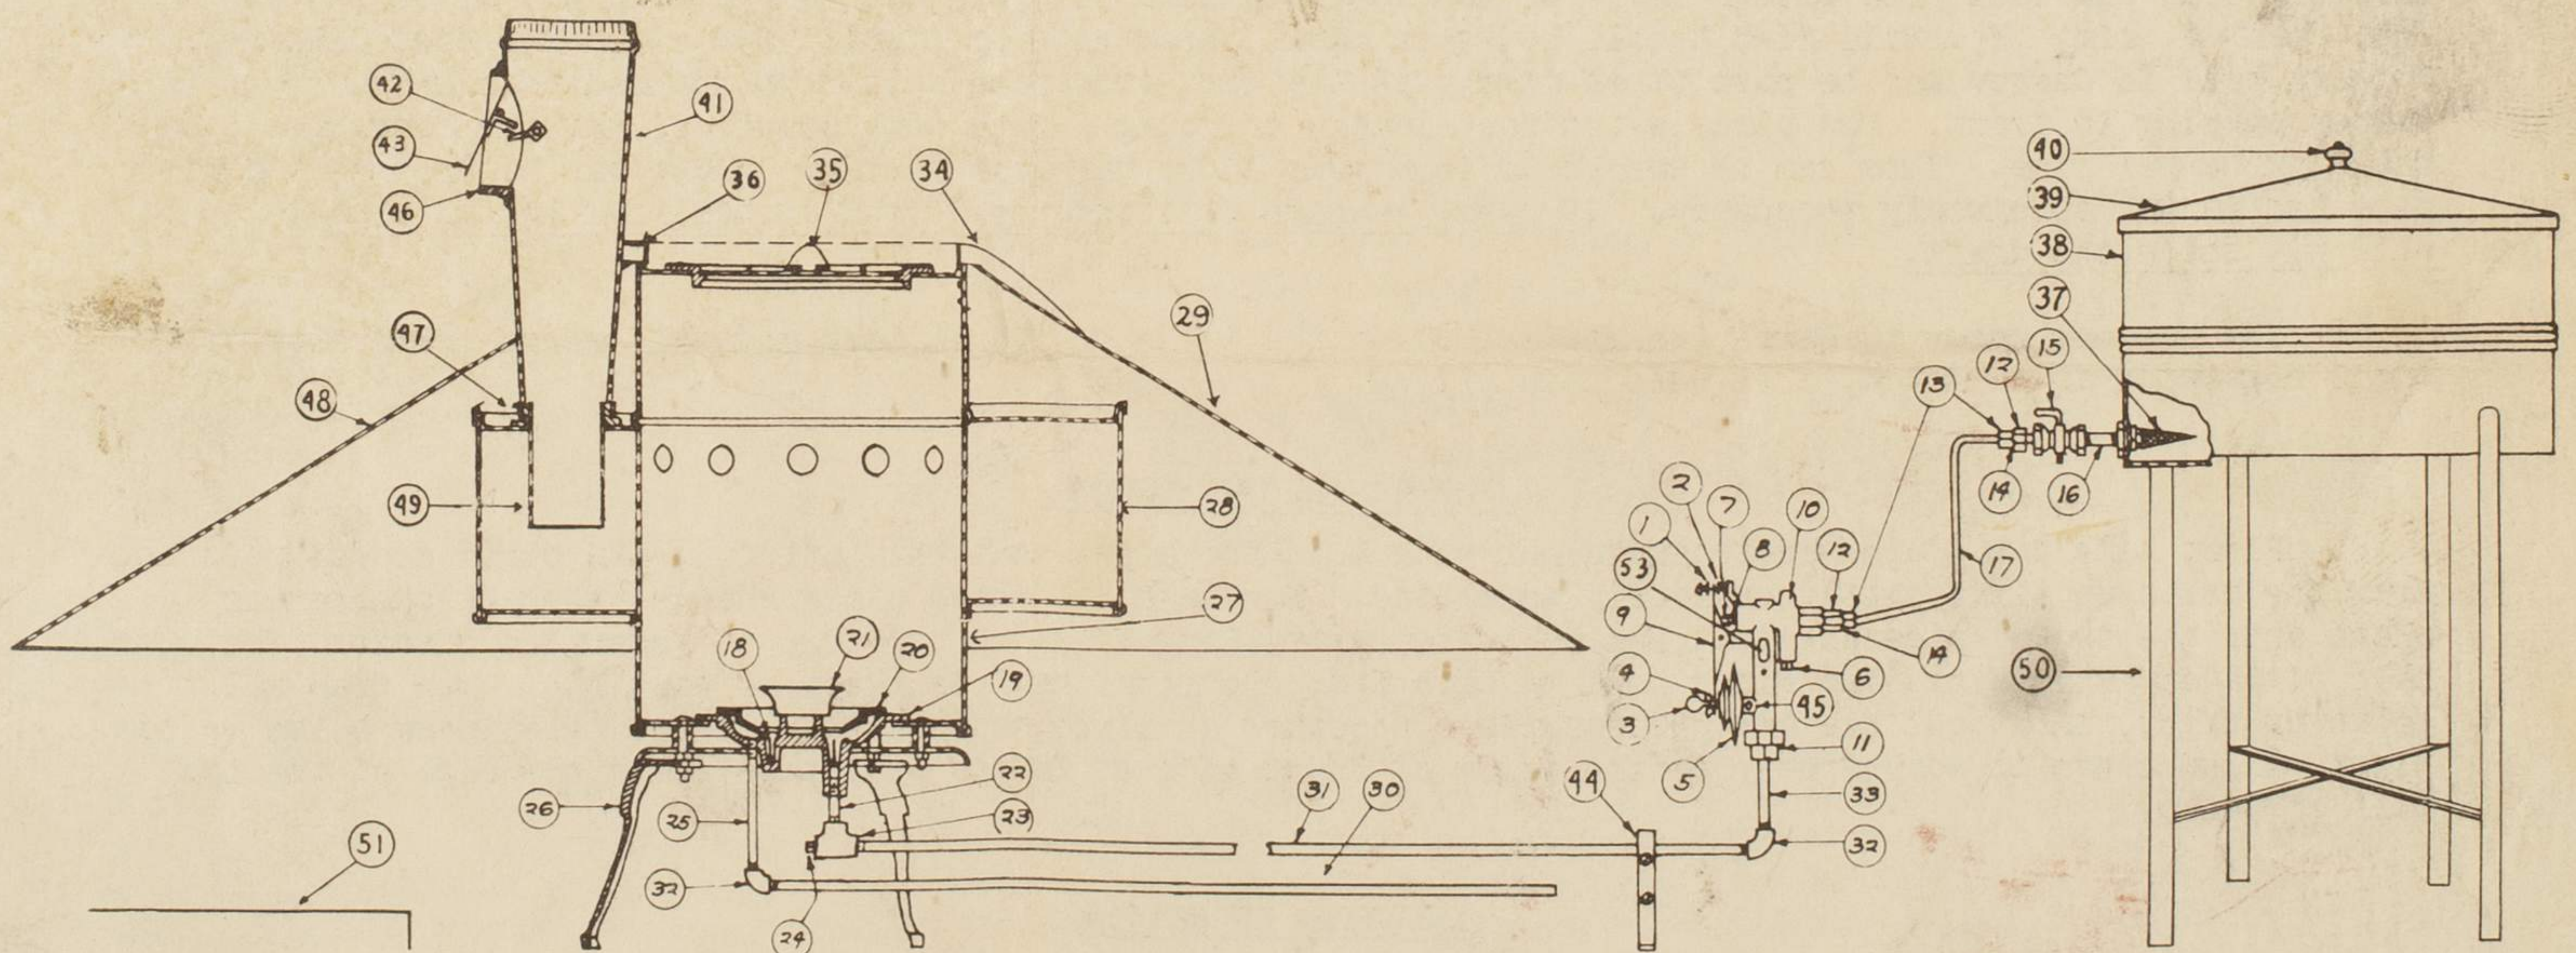


INSTRUCTIONS FOR SETTING UP AND OPERATING No. 924 PREMIER BROODER STOVE

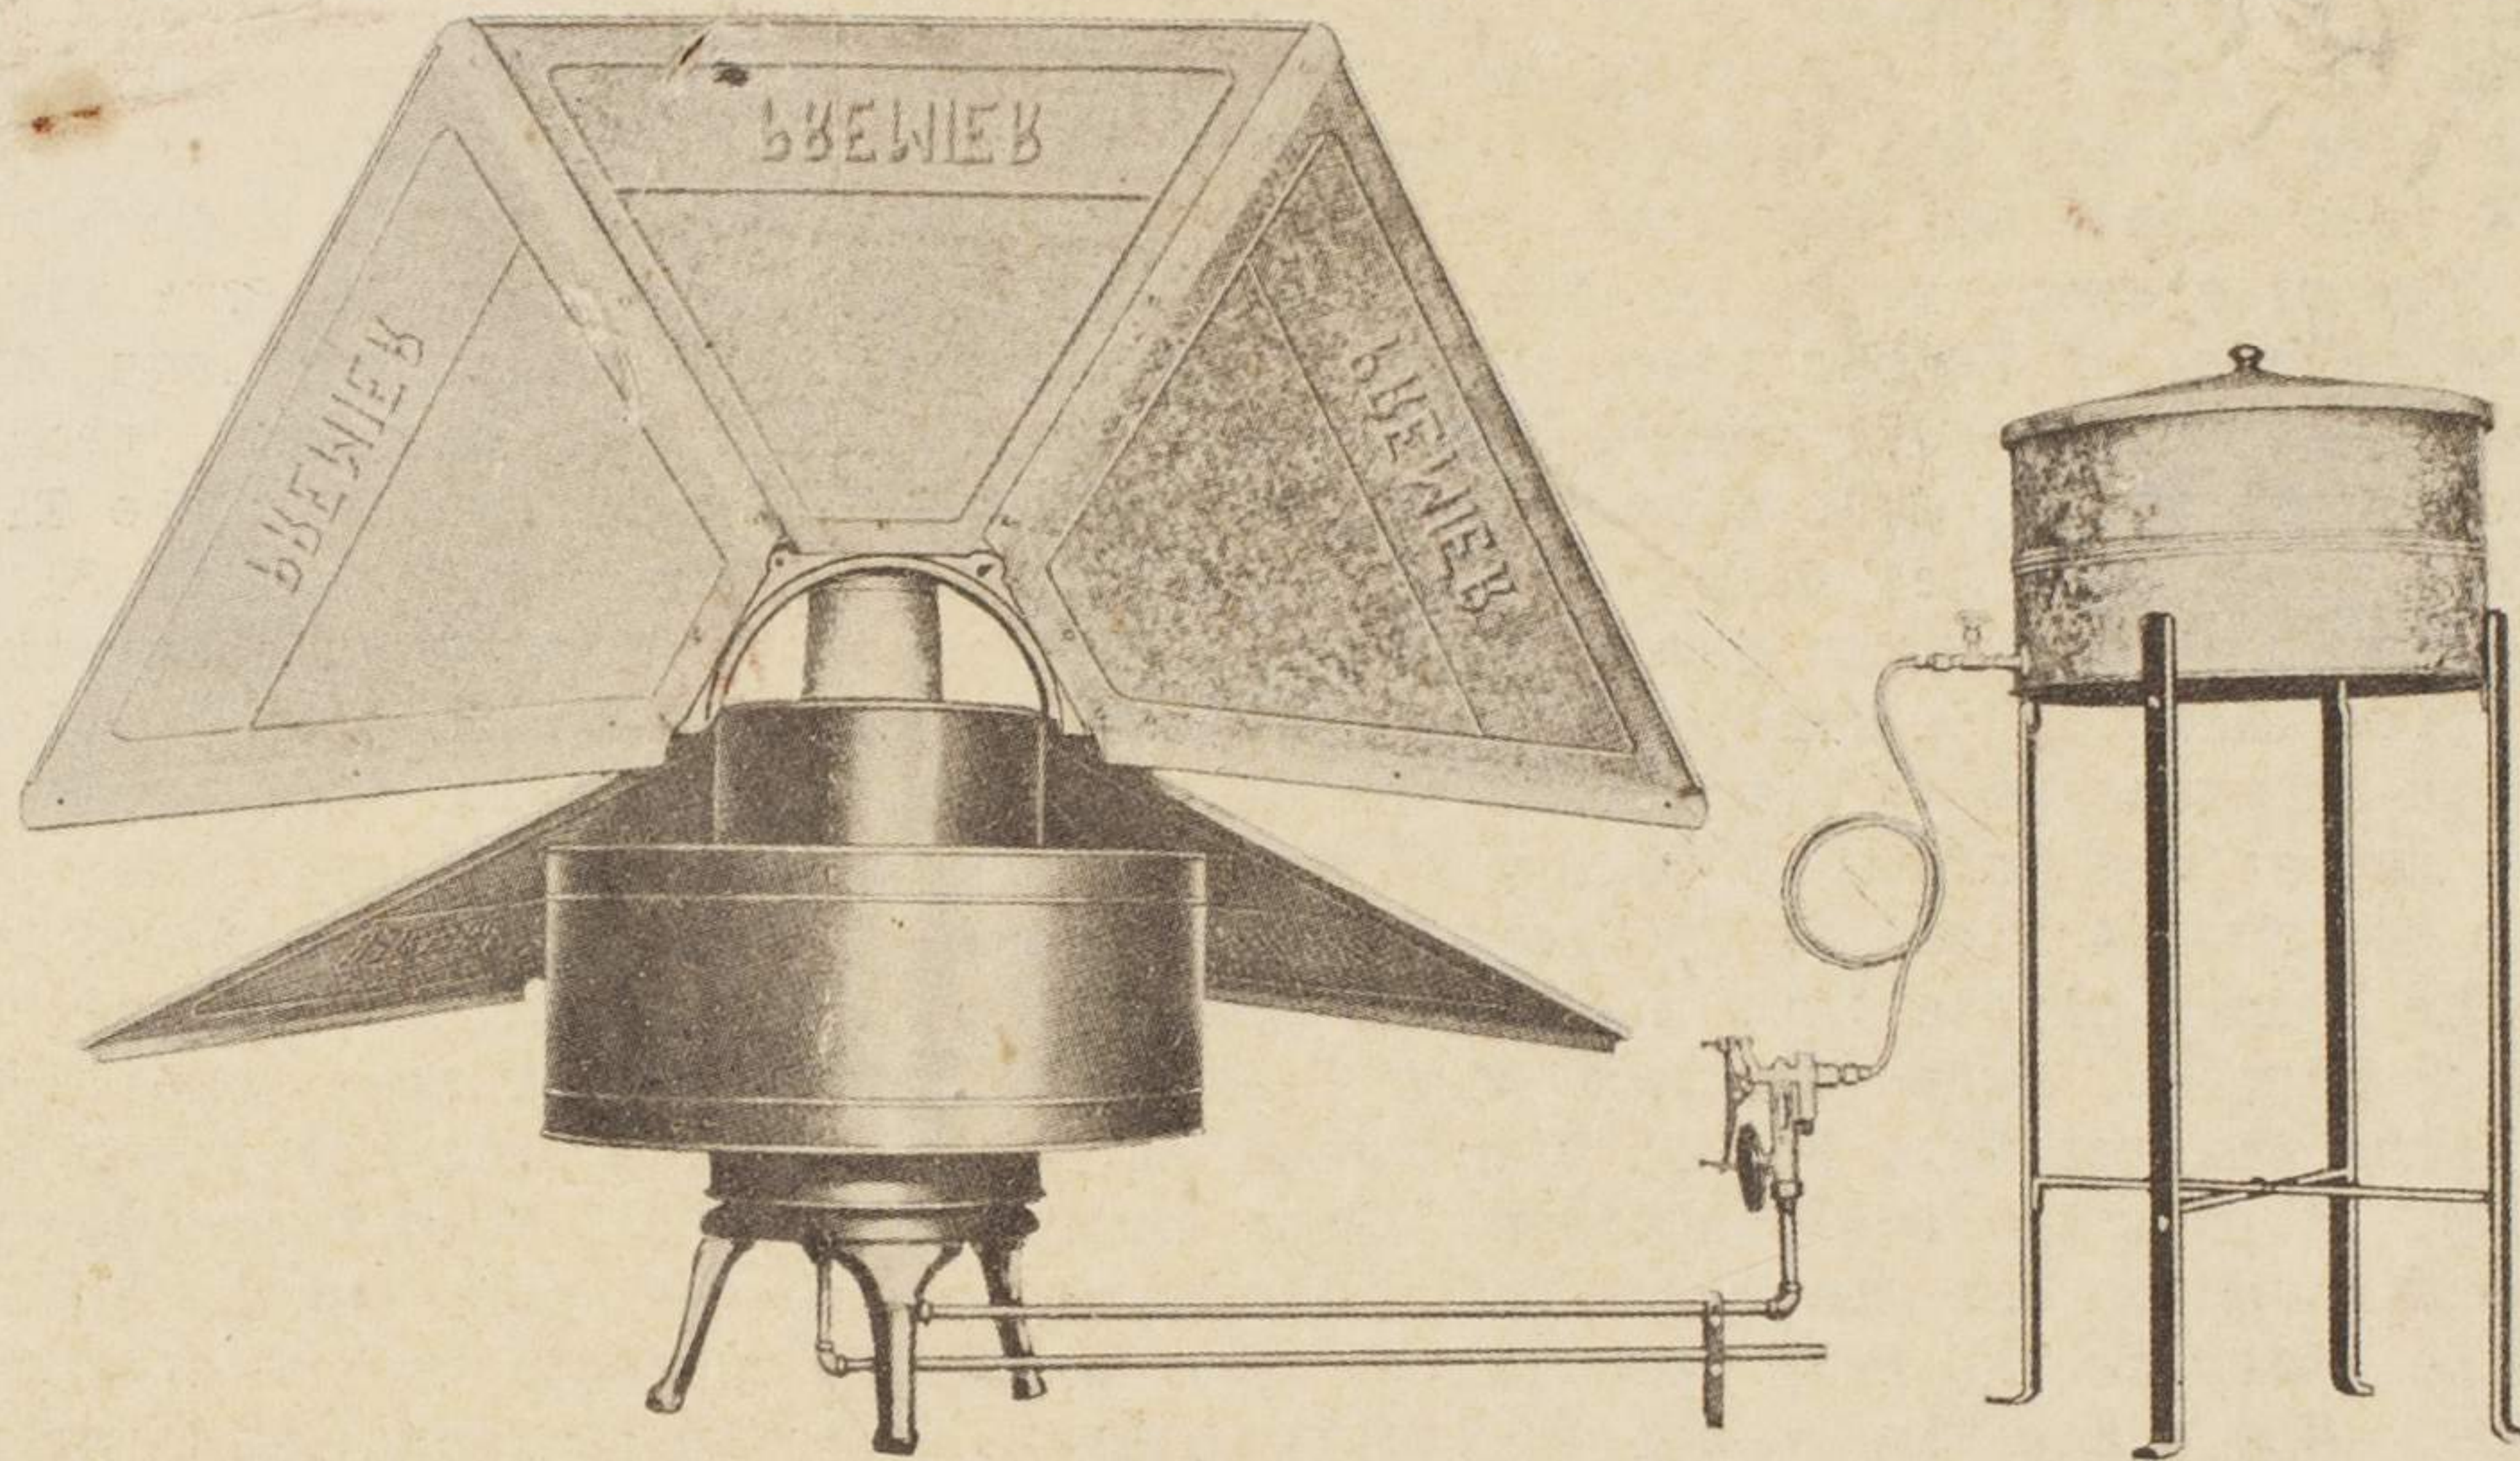

NOTICE

Unpack carefully and check component parts with above illustration before starting to assemble. If there is a shortage or defective parts found, advise us at once, giving name and number of part. If defective or broken parts are found, return them to us at once.

- No. 1 Maximum Adjusting Nut
- " 2 Minimum Adjusting Nut
- " 3 Temperature Adjusting Screw
- " 4 Wing Lock Nut
- " 5 Double Wafer Thermostat
- " 6 Sediment Chamber Drain Plug
- " 7 Valve Needle Spring
- " 8 Valve Needle
- " 9 Valve Lever
- " 10 Sight Feed Valve Body
- " 11 Sight Feed Valve Union
- " 12 Oil Feed Line Adapter - 2
- " 13 Compression Lock Screw - 2
- " 14 Compression Lock Sleeve - 2
- " 15 Oil Container Shut Off Cock
- " 16 Oil Container Nipple
1/4 x 1 1/2 inch
- " 17 Copper Pipe Line
- " 18 Asbestos Light Wick

- No. 19 Cast Burner Bowl
- " 20 Cast Air Diffusing Ring
- " 21 Cast Flame Spreader
- " 22 Oil Line Nipple 1/4 x 1 3/4
inch
- " 23 1/4 inch Tee
- " 24 1/4 inch Clean Out Plug
- " 25 Overflow Nipple 1/4 x 5 inch
- " 26 Cast Fire Chamber Legs - 3
- " 27 Fire Chamber
- " 28 Radiator Drum
- " 29 Front Canopy Sheet
- " 30 Overflow Pipe 1/4 x 36
- " 31 Oil Line Pipe 1/4 x 31
- " 32 Elbows 1/4 inch - 2
- " 33 Oil Line Nipple 1/4 x 3
Connection to Sight Feed
- " 34 Front Half Cast Canopy Ring
Hinge

- No. 35 Fire Chamber Door
- " 36 Back Half Cast Canopy Ring
Hinge
- " 37 Oil Container Filter
- " 38 Oil Container
- " 39 Oil Container Cover
- " 40 Oil Container Knob
- " 41 Wind Damper Pipe
- " 42 Wind Damper Back Draft Stop
- " 43 Swinging Wind Damper
- " 44 Pipe Line Support Bracket
- " 45 Thermostat Support Screw
- " 46 Wind Damper Cast Collar
- " 47 Cast Iron Pipe Collar - 5 inch
- " 48 Back Canopy Sheet
- " 49 Wind Damper Pipe Extension
- " 50 Support Stand for Oil Con-
tainer
- " 51 Cleaning Rod